


H-Channel Illustrations

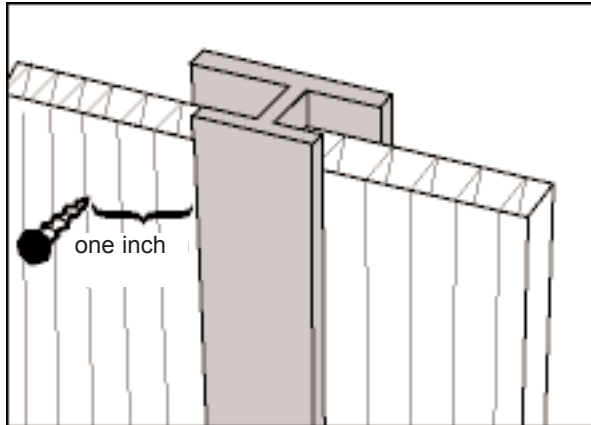

Proper screw placement with H Channel.

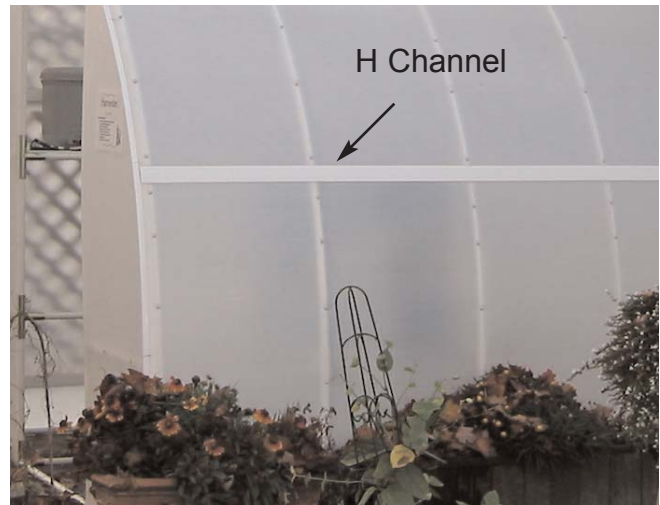


Photo of H-Channel installed.

H-CHANNEL: Panels can be joined together using H-Channel. This locks them into place and can help prevent water leakage. Attach one panel to your framing and leave about a 1/4" gap when you're attaching the second.

Secure panels by placing screws into frame 1" from each side of H-Channel. Be sure to leave enough space for the H-Channel to slide between the panels without running into a screw. If H-Channel is difficult to slide on, try spraying grooves of the H-Channel and the edge of the panel with a little WD-40 or clear silicone spray. Also try taking a dry bar of soap and rubbing it on panels or tapping on ends with a rubber mallet.